

 
ADD-ON DEVICE

Quickstart Guide

Outdoor External Strobe Siren

Model No. OSR1300

What's inside:

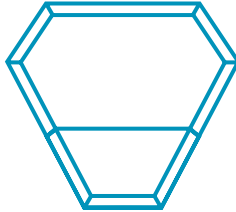

1x Outdoor External Strobe Siren




1x Power Adapter



Mounting Accessories


Broadband internet connection, iOS or Android phone and home router required.

 Diagram of PCB Board

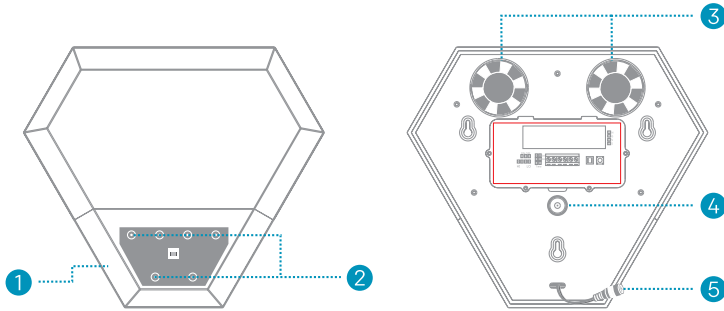

 1. Status / Alarm Strobe Lens
2. Siren LED


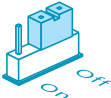
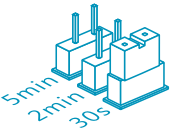
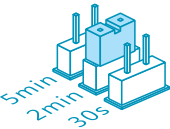
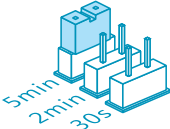
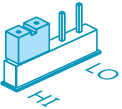
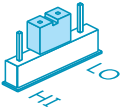
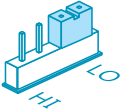
3. Built-in Siren
4. Tamper Switch
5. Adapter Interface

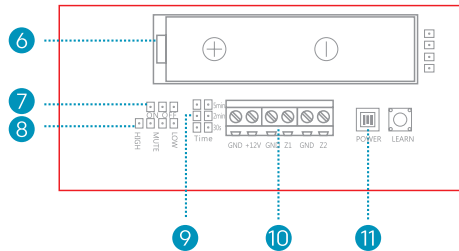

6. Backup Battery
7. Arm / Disarm prompt on / off Jumper
8. Siren Volume Jumper


9. Siren Time Jumper
10. Wired Block
11. On/Off Switch

Jumper Setup

Arm/Disarm Prompt	On (as default)	Off	
			
Siren Alarming Duration	30s (as default)	2 mins	5 mins
			
Siren Volume	High Volume (as default)	Mute	Low Volume
			

Step 1: Assemble your device and accessories

 1. Unpack your device and accessories.
2. Pair the device with the Security Shuttle within 1-10 feet to make sure the connection is working well.
3. Plug the Siren into power outlet.

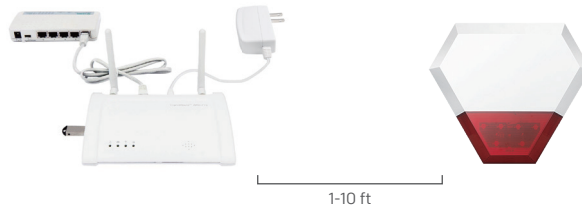

Step 2: Add a device

1. Open the app, tap on the menu button " ≡ " and select "Device Management".
2. Press the add button "+" next to Sensor List.
3. Follow the app instructions to scan the QR code located on the device.

Note: If the scan is incomplete, you will be asked to enter the serial number (SN) of the device.

Step 3: Mount your device

Before you mount your device, see if it's within Security Shuttle's range.

 
1. Take your device to the room you want to use it in.
2. Tap on the Emergency button in the main screen of the app to send an emergency notification.

If your External Siren sounds, it's within range, you can mount the siren.


Your Siren comes with a backup battery pre-installed. Please pull and remove the plastic strip when you want to use the battery, such as when power outage.

Installation


Choose a suitable position on an external wall, as high as possible, where the siren can be easily seen and out of easy reach of any potential vandal.

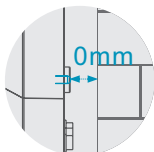

 - 1 Make sure the Tamper Switch can be fully depressed against the wall.

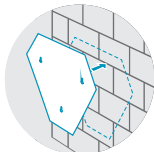

 
- 2 Using the mounting template provided.

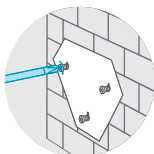

- 3 Drill in the three places indicated.



 - 4 Plug the Siren into power outlet.

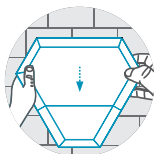

- 5 Mount the siren to the wall and make sure it is well positioned.

Troubleshooting Tips

Are your devices listed in your app?

If you're having trouble installing your devices, see if they're listed in your app:

- Navigate to ☰ > **Device Management** to see if all your devices are listed.
- Tap + next to the device category and follow the on-screen instructions to add any missing devices.

Are your devices communicating with Security Shuttle?

- If your devices don't connect to Security Shuttle, they might be too far away. Take them to a location that's closer to Security Shuttle and try again.
- If they do connect, you'll know the range of your device and where to install a range extender.
- Alternatively, you can move Security Shuttle closer to your device.
- If your devices still don't communicate with Security Shuttle, even when they're in the same room, navigate to ☰ > **Device Management** > + on the app to add your devices again.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



99200306MIG