


ADD-ON DEVICE

Quickstart Guide

Outdoor External Strobe Siren

Model No. OSR1300

What's inside:

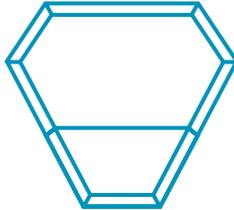

1x Outdoor External Strobe Siren




1x Power Adapter



Mounting Accessories


Broadband internet connection, iOS or Android phone and home router required.

Esquema de la placa del circuito impreso

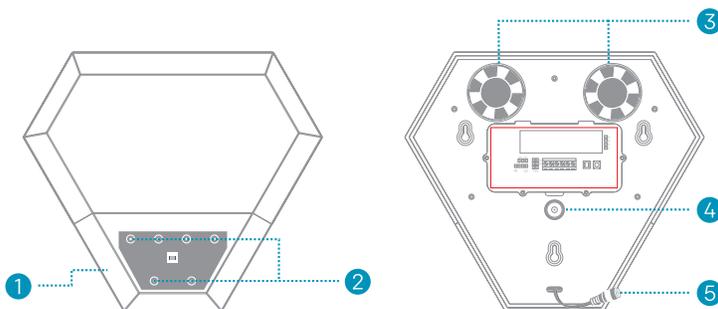

1. Lente estroboscópica de alarma/
estado
2. LED de sirena





3. Sirena incorporada
4. Interruptor antimanipulación
5. Interfaz del adaptador

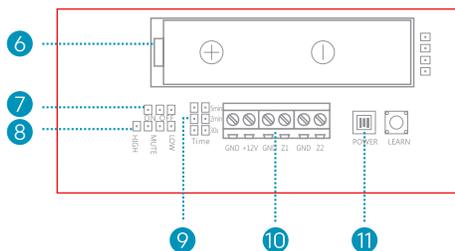

6. Batería de reserva
7. Saltador encendido/apagado
advertencia armar/desarmar
8. Saltador de volumen de sirena

9. Saltador de tiempo de sirena
10. Bloque cableado
11. Interruptor de encendido/apagado

Configuración de saltadores

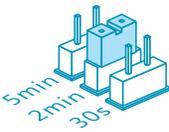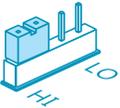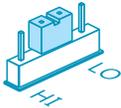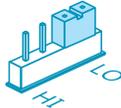Advertencia armar/ desarmar	Encendido (por defecto)	Apagado	
			
Duración de la alarma de la sirena	30s (por defecto)	2 mín.	5 mín.
			
Volumen de la sirena	Volumen alto (por defecto)	Silenciar	Volumen bajo
			

Paso 1: Ensamble el dispositivo y los accesorios

1. Desempaque el dispositivo y los accesorios.
2. Empareje el dispositivo con el Security Shuttle dentro de un rango de 1-10 pies para asegurarse de que la conexión funciona correctamente.
3. Enchufe la sirena en la toma de corriente.



Paso 2: Agregue un dispositivo

1. Abra la aplicación, pulse en el botón de menú " ≡ " y seleccione "Administración de Dispositivo".
2. Presione el botón añadir '+' junto a la Lista de Sensores.
3. Siga las instrucciones de la aplicación para escanear el código QR situado en el dispositivo.

Nota: Si el análisis es incompleto, se le pedirá que introduzca el número de serie (SN) del dispositivo.

Paso 3: Monte el dispositivo

Antes de montar el dispositivo, compruebe si está dentro del rango del Security Shuttle.


1. Lleve el dispositivo a la habitación en la que desee utilizarlo.
2. Pulse el botón de Emergencia en la pantalla principal de la aplicación para enviar una notificación de emergencia.

Si suena la sirena externa, entonces está dentro del rango, por lo que puedes montar la sirena.

Su sirena viene con una batería de respaldo pre-instalada. Por favor hale y retire la tira de plástico cuando se desea usar la batería, tal como cuando hay un corte de energía.

Instalación

Elija una posición adecuada en una pared externa, lo más alto posible, donde la sirena pueda verse fácilmente y quede fuera del alcance de posibles actos vandálicos.

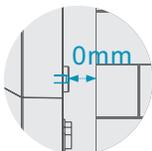

- 1 Asegúrese de que el interruptor antimanipulación pueda presionarse por completo contra la pared.



- 2 Utilice la plantilla de montaje suministrada.



- 3 Taladre los tres puntos indicados.



- 4 Enchufe la sirena a la toma de corriente.



- 5 Monte la sirena en la pared y asegúrese de que esté bien colocada.

Troubleshooting Tips

Are your devices listed in your app?

If you're having trouble installing your devices, see if they're listed in your app:

- Navigate to ☰ > **Device Management** to see if all your devices are listed.
- Tap + next to the device category and follow the on-screen instructions to add any missing devices.

Are your devices communicating with Security Shuttle?

- If your devices don't connect to Security Shuttle, they might be too far away. Take them to a location that's closer to Security Shuttle and try again.
- If they do connect, you'll know the range of your device and where to install a range extender.
- Alternatively, you can move Security Shuttle closer to your device.
- If your devices still don't communicate with Security Shuttle, even when they're in the same room, navigate to ☰ > **Device Management** > + on the app to add your devices again.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



99200306MIG