


ADD-ON DEVICE

Quickstart Guide

Outdoor External Strobe Siren

Model No. OSR1300

What's inside:

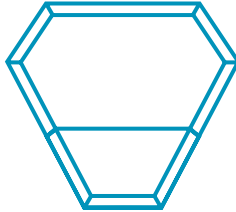

1x Outdoor External Strobe Siren




1x Power Adapter



Mounting Accessories


Broadband internet connection, iOS or Android phone and home router required.

Printplaat diagram

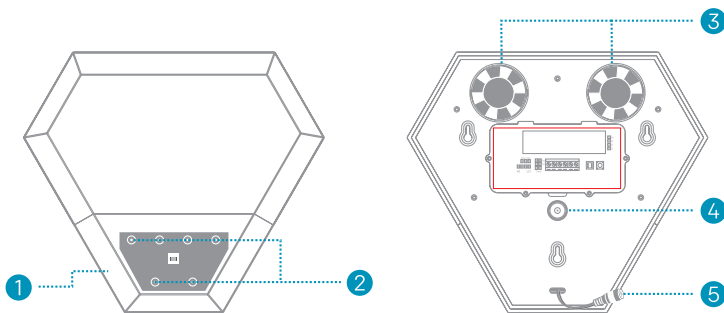

- 1. Status/Alarm stroboscooplens
- 2. Sirene LED









- 3. Ingebouwde sirene
- 4. DIP-schakelaar
- 5. Adapterinterface

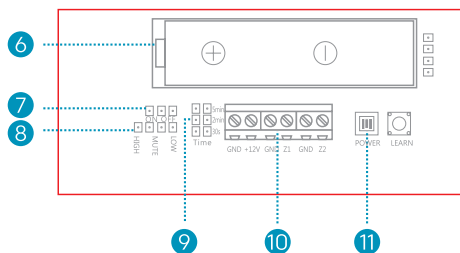

- 6. Reserve-accu
- 7. Activeren/Deactiveren prompt aan/
uit schakelaar
- 8. Schakelaar sirenevolumen


- 9. Schakelaar sireneduur
- 10. Kabel aansluiting
- 11. Aan/uitschakelaar

    Installatie schakelaar
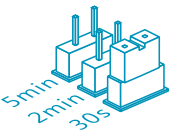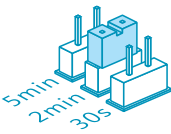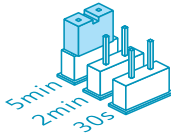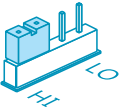
<p>Prompt activeren/ deactiveren</p>	<p>Aan (als standaard)</p> 		<p>Uit</p> 	
<p>Duur Alarmsirene</p>	<p>30s (als standaard)</p> 	<p>2 min</p> 	<p>5 min</p> 	
<p>Volume sirene</p>	<p>Volume hoog (als standaard)</p> 	<p>Gedempt</p> 	<p>Volume laag</p> 	

Stap 1: Apparaat en accessoires gereedmaken voor gebruik

1. Haal het apparaat en de accessoires uit de verpakking.
2. Verbind het apparaat met de Centrale Module op een afstand van 0,5 - 3m en controleer of de verbinding goed werkt.
3. Sluit de sirene aan op een stopcontact.

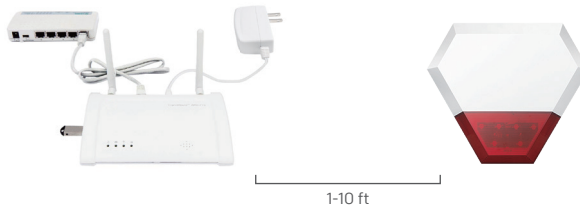

Stap 2: Voeg een apparaat toe

1. Open de app en kies uit de menulijst "☰" aan de zijkant "Apparaatbeheer".
2. Druk op de toevoegen ("+") knop naast de sensor-lijst.
3. Volg de instructies in de App om de QR-code te scannen op het apparaat.

Opmerking: Als de scan voltooid is moet u het serienummer (SN) van het apparaat invoeren.

Stap 3: Monteer het apparaat

Controleer voordat u het apparaat monteert of deze zich binnen het bereik van de Centrale Module bevindt.


1. Breng het apparaat in de ruimte waar u deze wilt gebruiken.
2. Tik op de Alarmknop ("Emergency") in het hoofdmenu van de app om daarmee een noodoproep te sturen.

Als de sirene klinkt is deze binnen bereik van de Centrale Module.


Uw sirene wordt geleverd met een voorgeïnstalleerd back-up batterij. Verwijder de plastic strip als u de batterij wilt gebruiken in geval van een netstroomonderbreking.

Installatie


Zoek een geschikte plek zo hoog mogelijk op een buitenmuur waar de sirene makkelijk zichtbaar, maar niet bereikbaar is voor mogelijke vandalen.

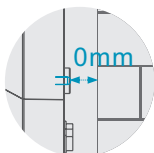

- 1 Zorg ervoor dat de DIP-schakelaar volledig tegen de muur gedrukt zit.

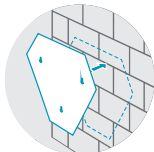


- 2 Gebruik de meegeleverde bevestigingsmal.

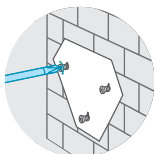

- 3 Boor in de drie gemerkte plaatsen.



- 4 Sluit de sirene op de elektriciteit aan.

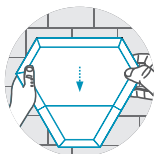

- 5 Bevestig de sirene aan de muur en zorg voor een geschikte plek.

Troubleshooting Tips

Are your devices listed in your app?

If you're having trouble installing your devices, see if they're listed in your app:

- Navigate to ☰ > **Device Management** to see if all your devices are listed.
- Tap + next to the device category and follow the on-screen instructions to add any missing devices.

Are your devices communicating with Security Shuttle?

- If your devices don't connect to Security Shuttle, they might be too far away. Take them to a location that's closer to Security Shuttle and try again.
- If they do connect, you'll know the range of your device and where to install a range extender.
- Alternatively, you can move Security Shuttle closer to your device.
- If your devices still don't communicate with Security Shuttle, even when they're in the same room, navigate to ☰ > **Device Management** > + on the app to add your devices again.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



99200306MIG